


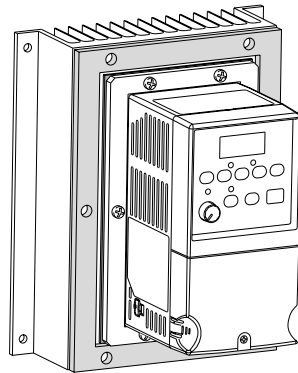


Installation Instructions
Installationsanleitung
Installation
Installazione
Instalación
Instructies
Instalação

PowerFlex 4/40/400 Flange Mount Drive and Replacement Plate Drive
PowerFlex 4/40/400 flanschmontierter FU und an einer Ersatzplatte montierter FU
Variateur PowerFlex 4/40/400 à bride de montage et variateur de rechange sur plaque
PowerFlex 4/40/400 - Inverter con montaggio a flangia e ed inverter con piastra di ricambio
Variador de montaje en brida y variador de placa de repuesto PowerFlex 4/40/400
PowerFlex 4/40/400 op flens gemonteerde drive en drive op vervangingsplaat
Inversor de montagem em flange e com placa de reposição PowerFlex 4/40/400




22A-xxxxF104
 22B-xxxxF104
 22C-xxxxF103

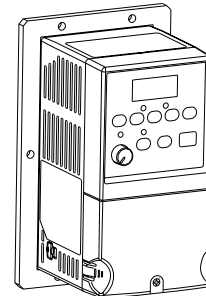


22A-xxxxH204
 22B-xxxxH204
 22C-xxxxH103

Flange Mount Drive / Flanschmontierter FU / Variateur à bride de montage / Inverter con montaggio a flangia / Variador de montaje en brida / Op flens gemonteerde drive / Inversor de montagem em flange

Frame A
 Baugröße A
 Taille A
 Quadro A
 Tamaño A
 Frame A
 Gabinete A



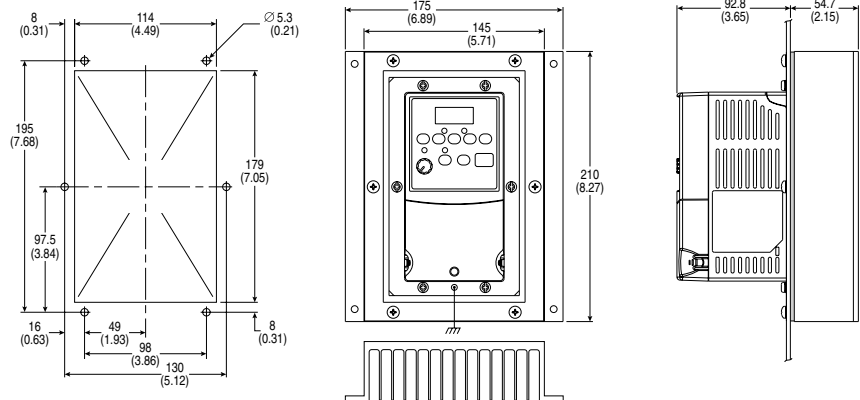


Frame B
 Baugröße B
 Taille B
 Quadro B
 Tamaño B
 Frame B
 Gabinete B

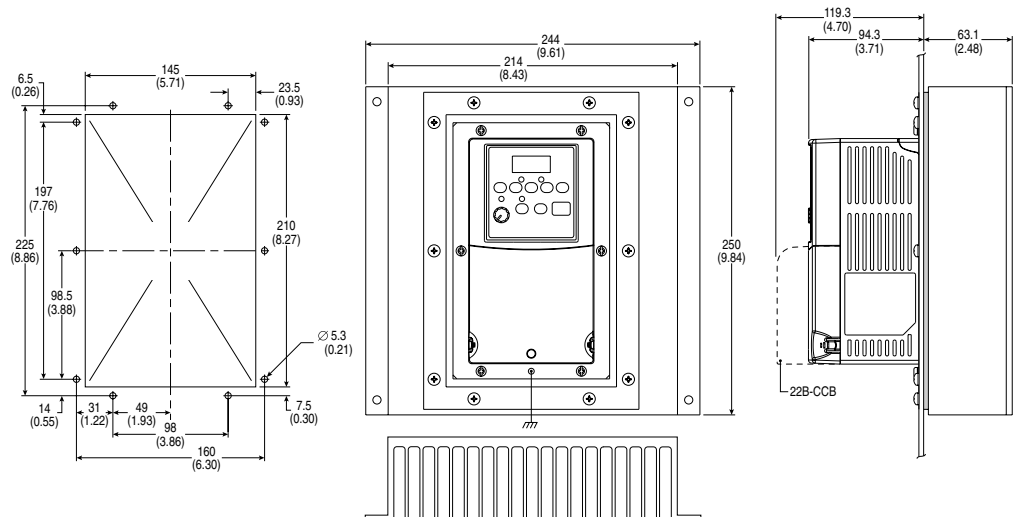

5011618901-40P1

Frame C
 Baugröße C
 Taille C
 Quadro C
 Tamaño C
 Frame C
 Gabinete C

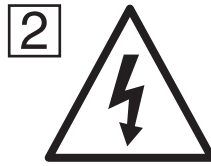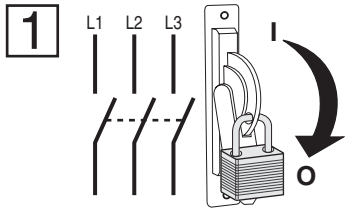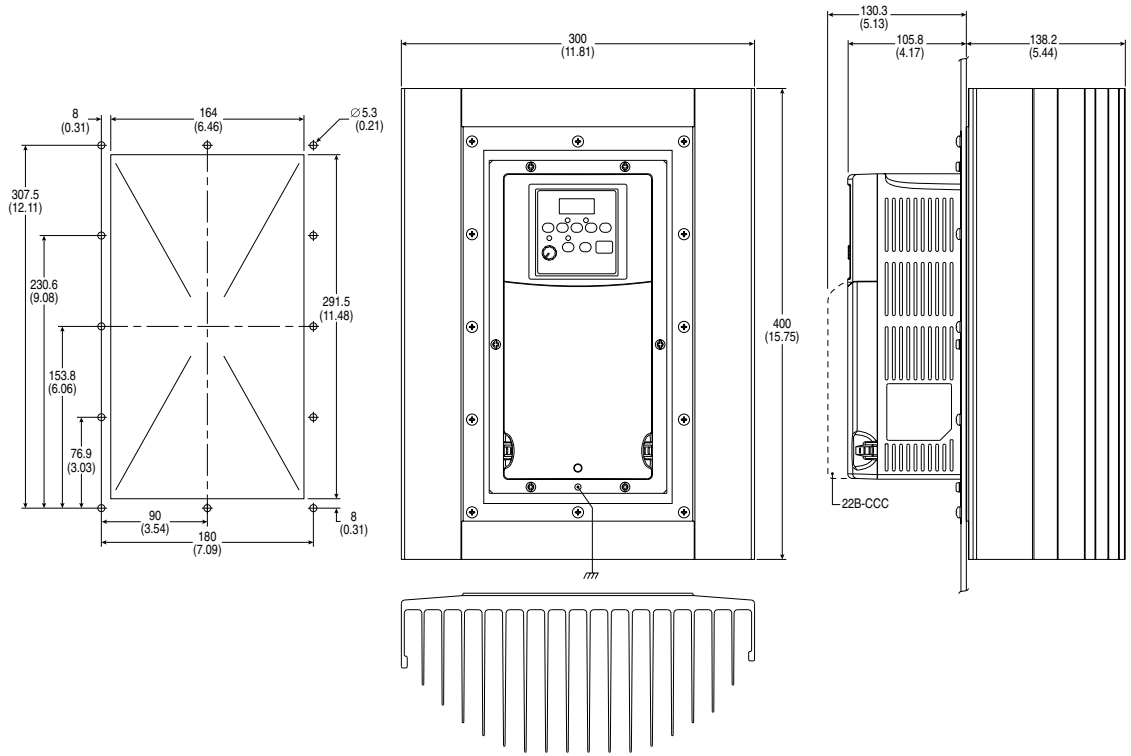

Wait three minutes for capacitors to discharge to safe voltage levels.

Drei Minuten warten, bis die Kondensatoren sich auf eine sichere Spannung entladen haben.



Attendre trois minutes pour s'assurer que les condensateurs se sont déchargés jusqu' à des niveaux de tension sans danger.

Attendere tre minuti affinché i condensatori si scarichino fino a raggiungere un livello di tensione sicuro.

Espera tres minutos a que los condensadores se descarguen a niveles seguros de tensión; de lo contrario puede sufrir lesiones o incluso la muerte.


Wacht drie minuten zodat de condensators zich kunnen ontladen tot een veilig niveau.

Espera três minutos para que os capacitores descarreguem a níveis seguros de tensão.

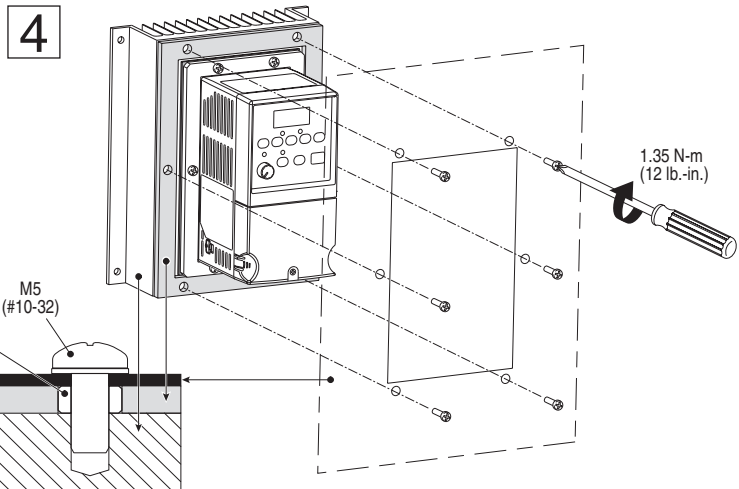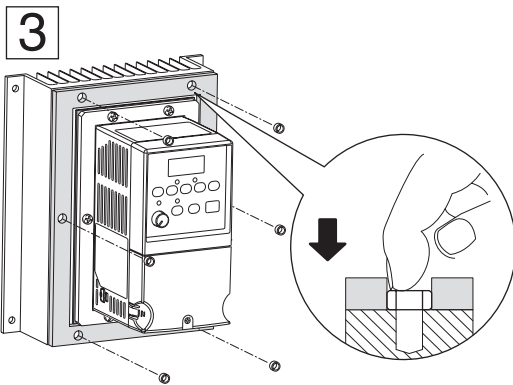


**Replacement Plate Drive / An einer Ersatzplatte montierter FU / Variateur de rechange sur plaque /
 Inverter con piastra di ricambio / Variador de placa de repuesto / Drive op vervangingsplaat /
 Inversor com placa de reposição**


Frame A
 Baugröße A
 Taille A
 Quadro A
 Tamaño A
 Frame A
 Gabinete A

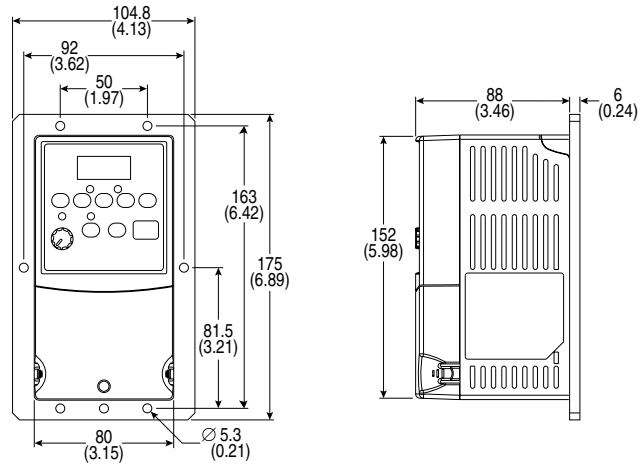


Frame B
 Baugröße B
 Taille B
 Quadro B
 Tamaño B
 Frame B
 Gabinete B

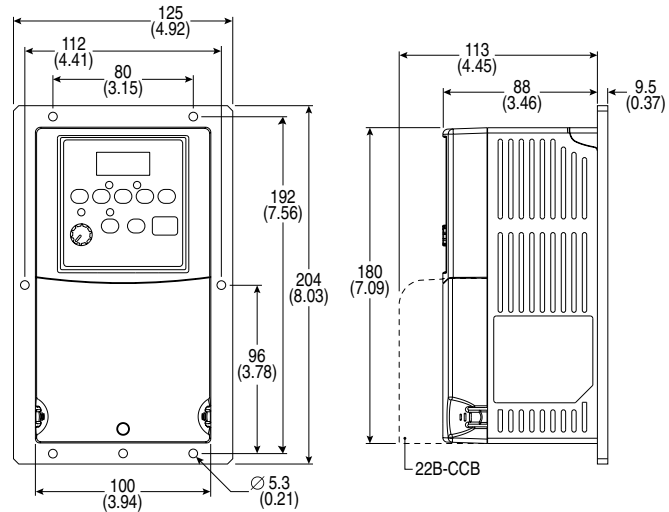

Frame C
 Baugröße C
 Taille C
 Quadro C
 Tamaño C
 Frame C
 Gabinete C

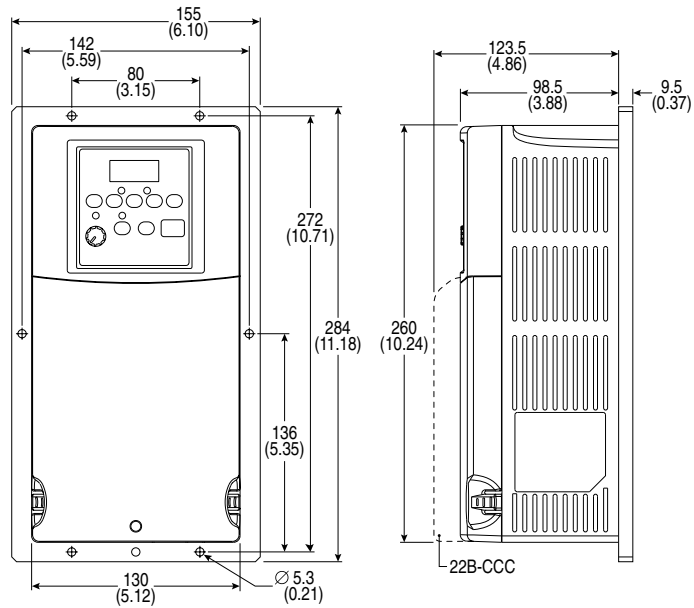

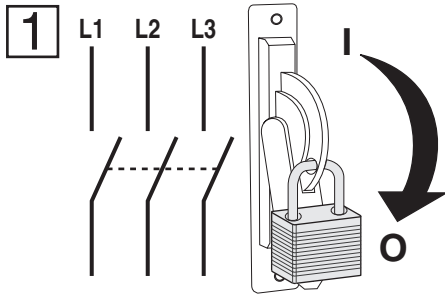

Wait three minutes for capacitors to discharge to safe voltage levels.

Drei Minuten warten, bis die Kondensatoren sich auf eine sichere Spannung entladen haben.







Attendre trois minutes pour s'assurer que les condensateurs se sont déchargés jusqu' à des niveaux de tension sans danger.

Attendere tre minuti affinché i condensatori si scarichino fino a raggiungere un livello di tensione sicuro.

Espera tres minutos a que los condensadores se descarguen a niveles seguros de tensión; de lo contrario puede sufrir lesiones o incluso la muerte.

Wacht drie minuten zodat de condensators zich kunnen ontladen tot een veilig niveau.

Espera três minutos para que os capacitores descarreguem a níveis seguros de tensão.

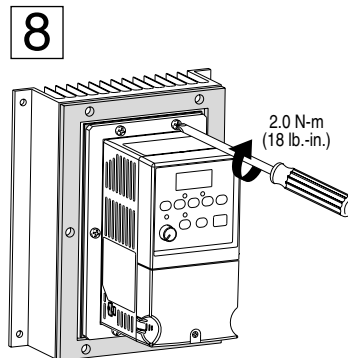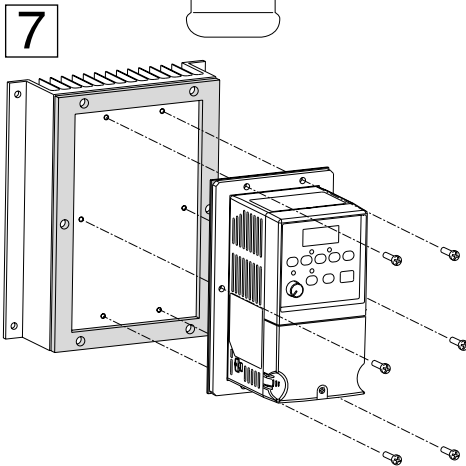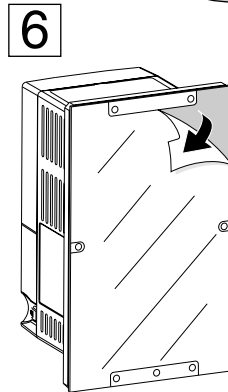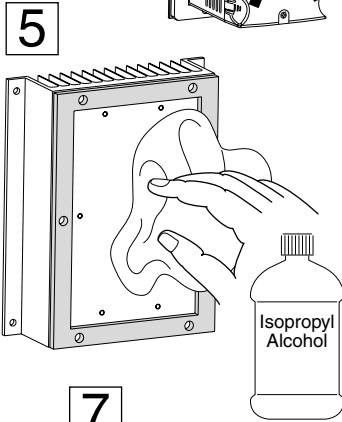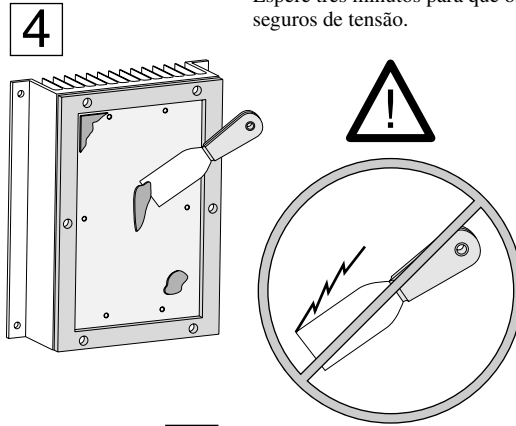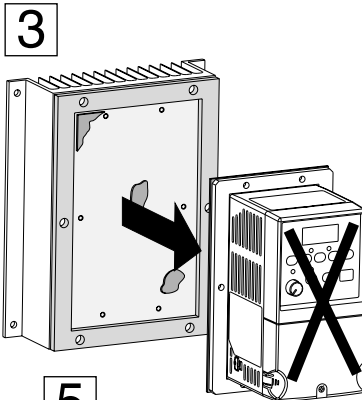

www.rockwellautomation.com

Corporate Headquarters
Rockwell Automation, 777 East Wisconsin Avenue, Suite 1400, Milwaukee, WI, 53202-5302 USA, Tel: (1) 414.212.5200, Fax: (1) 414.212.5201

Headquarters for Allen-Bradley Products, Rockwell Software Products and Global Manufacturing Solutions
Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36-BP 3A/B, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, 27/F Citicorp Centre, 19 Whitfield Road, Causeway Bay, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Headquarters for Dodge and Reliance Electric Products
Americas: Rockwell Automation, 6040 Ponders Court, Greenville, SC 29615-4617 USA, Tel: (1) 864.297.4800, Fax: (1) 864.281.2433
Europe: Rockwell Automation, Brühlstraße 22, D-74834 Elztal-Dallau, Germany, Tel: (49) 6261 9410, Fax: (49) 6261 1774
Asia Pacific: Rockwell Automation, 55 Newton Road, #11-01/02 Revenue House, Singapore 307987, Tel: (65) 351 6723, Fax: (65) 355 1733

U.S. Allen-Bradley Drives Technical Support
Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, Email: support@drives.ra.rockwell.com, Online: www.ab.com/support/abdrives

Publication 22-IN003B-MU-P – August 2004

Supersedes 22-IN003A-MU-P – September 2003



Copyright © 2004 Rockwell Automation, Inc. All rights reserved. Printed in Taiwan.